 
 
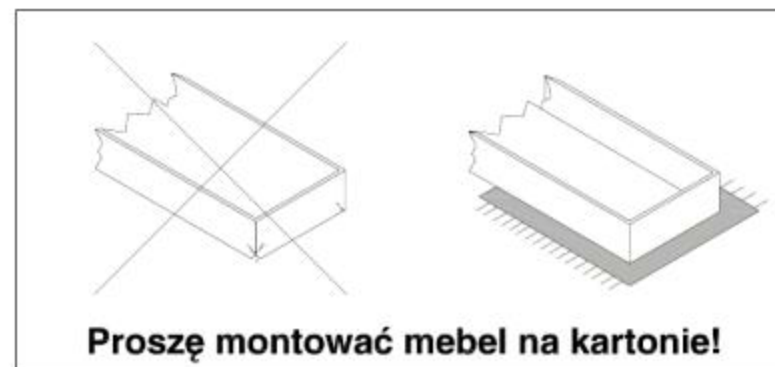 
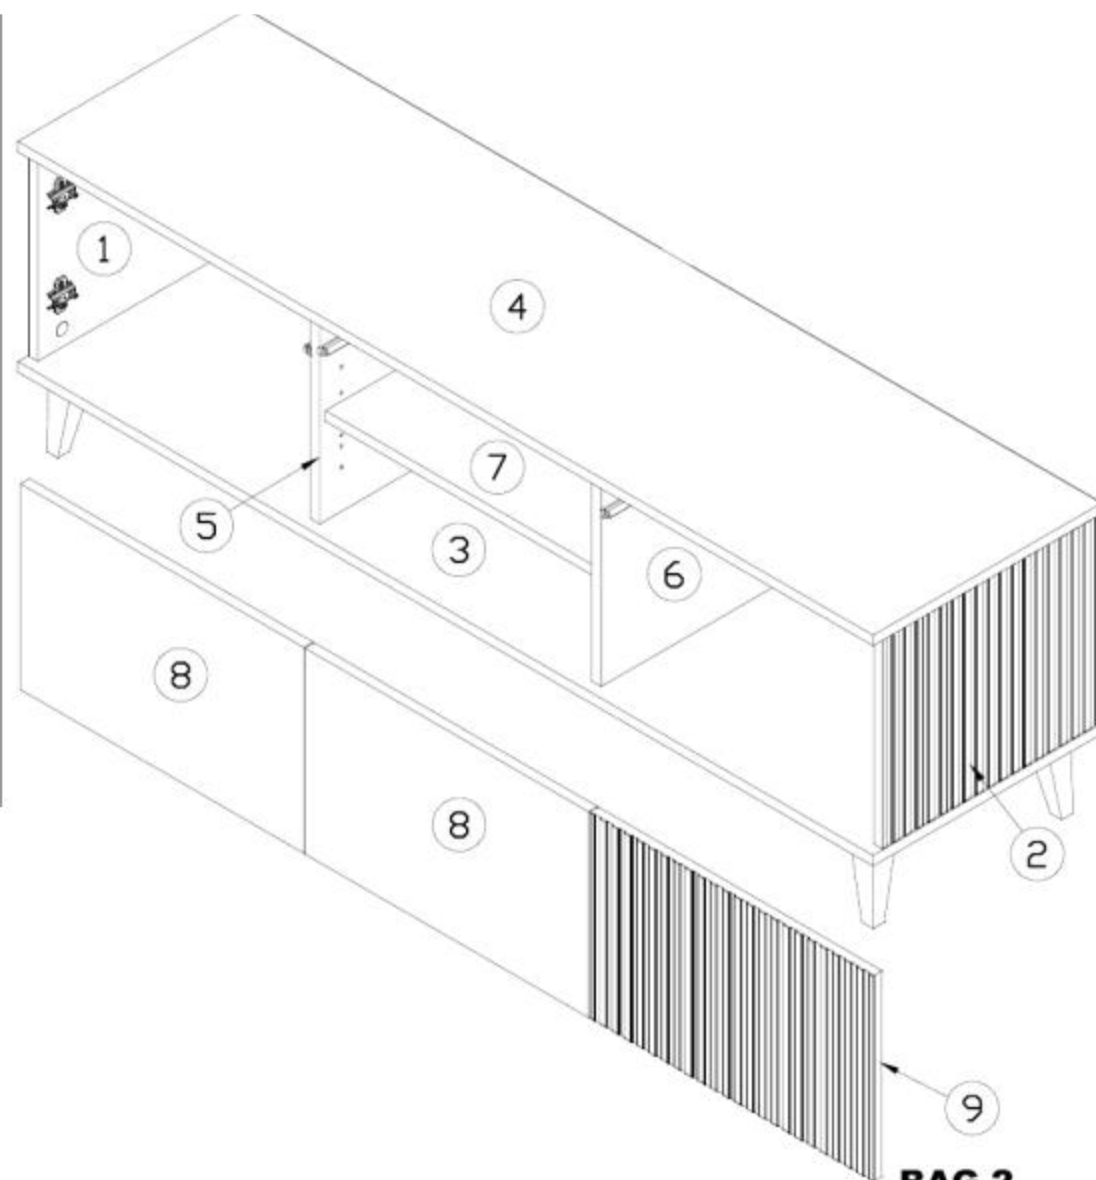 


RTV 150

Do montażu potrzebne są:
Für die Montage dieser Type benötigen Sie:



BAG 1



BAG 2



BAG 3



BAG 4







BAG 5




RTV 180

    
1

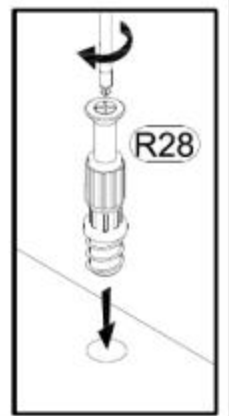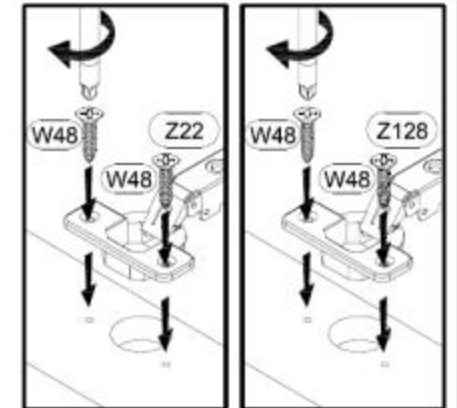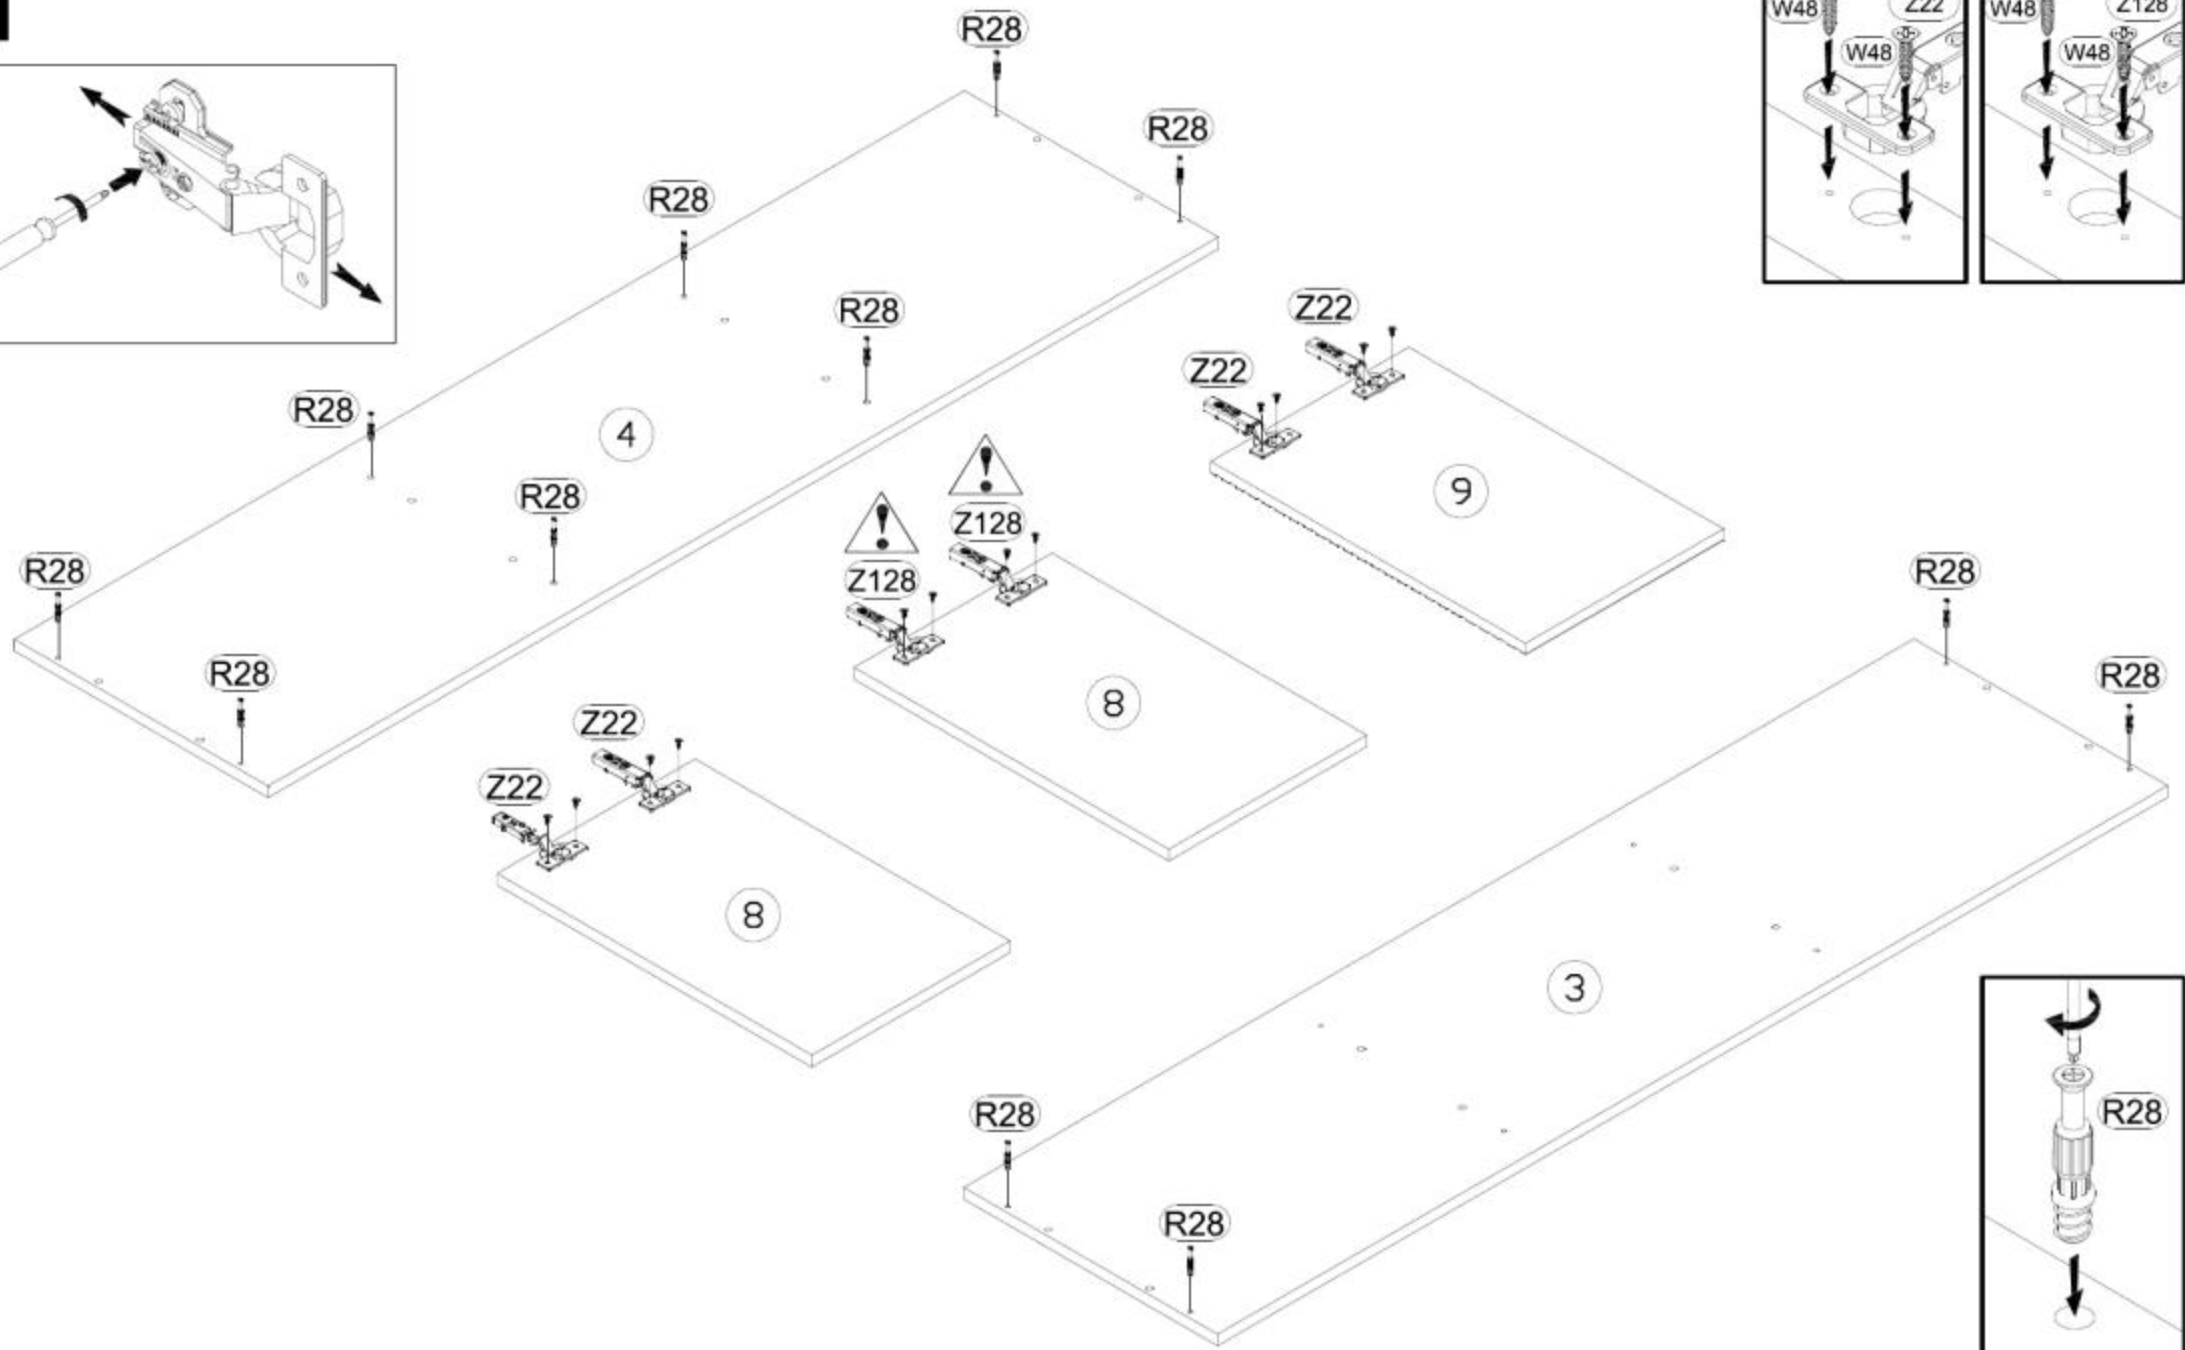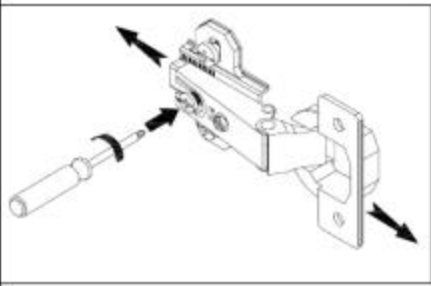

RTV150

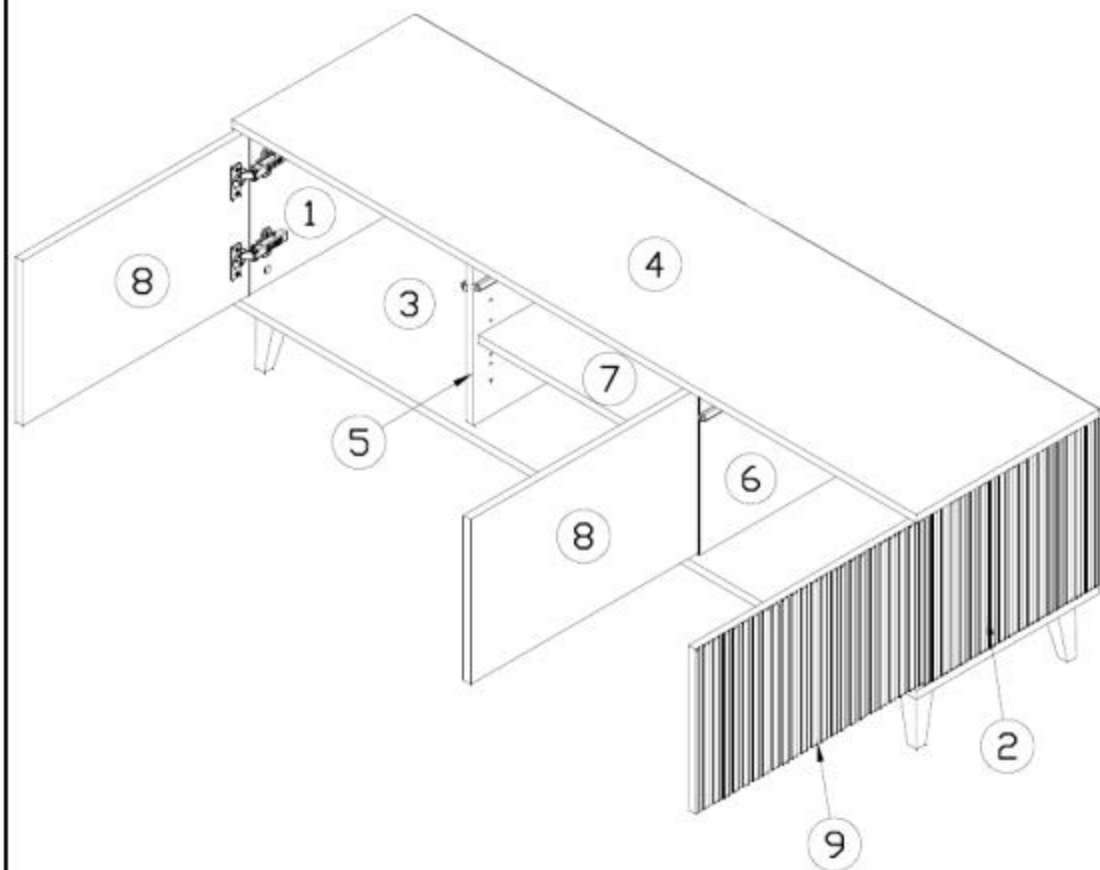 










"RIGHT" 2-5

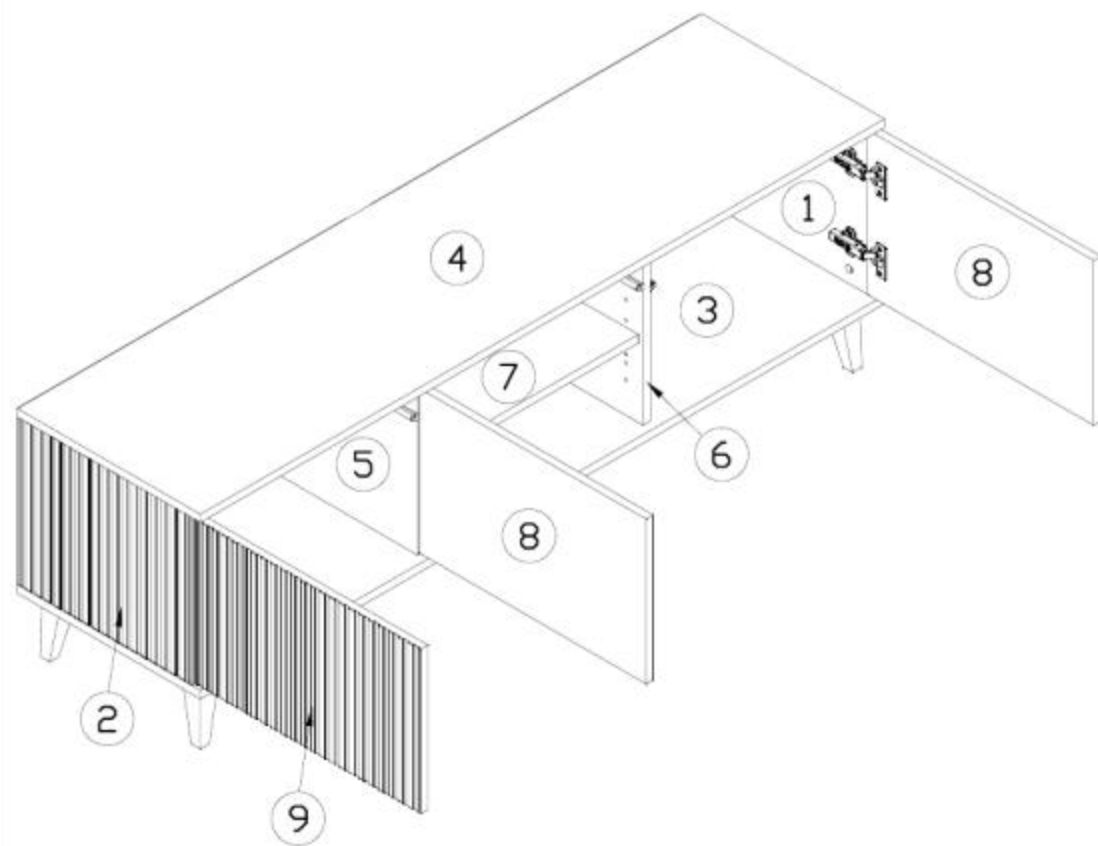 

"LEFT" 6-9






RTV 150

         2

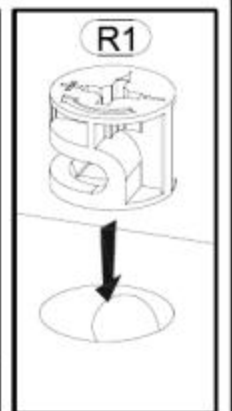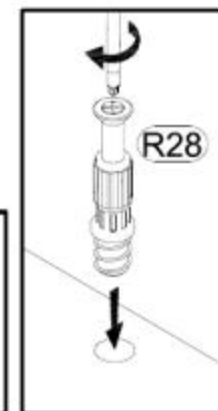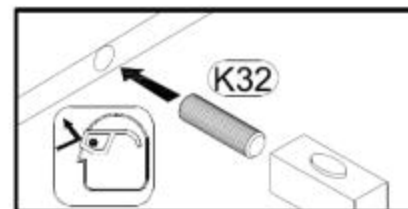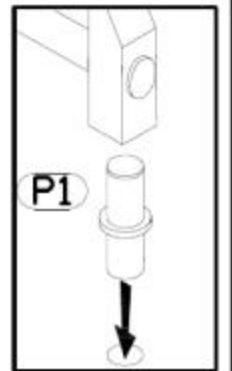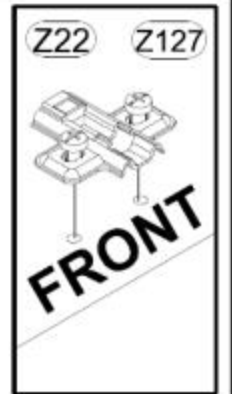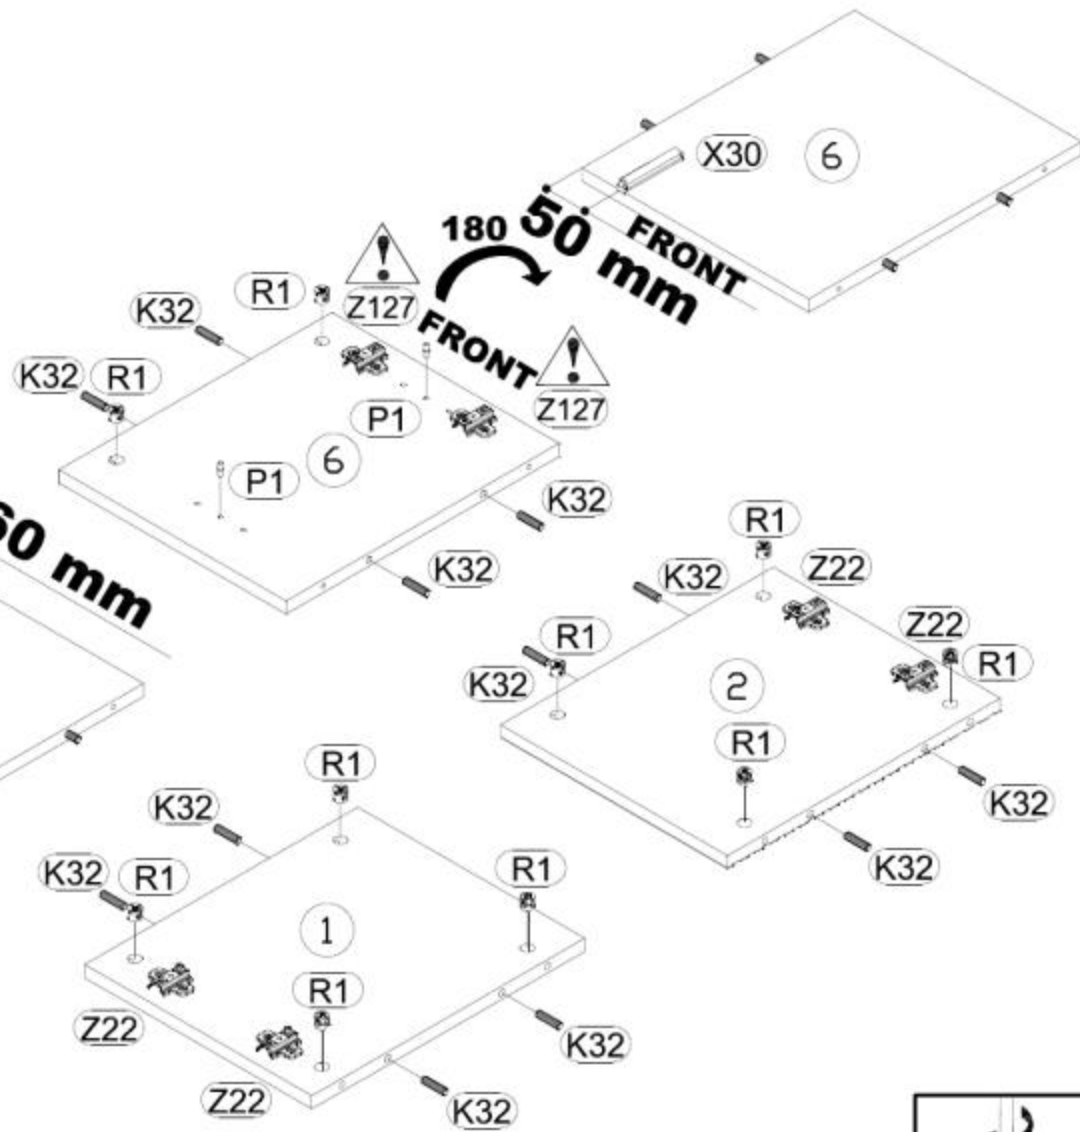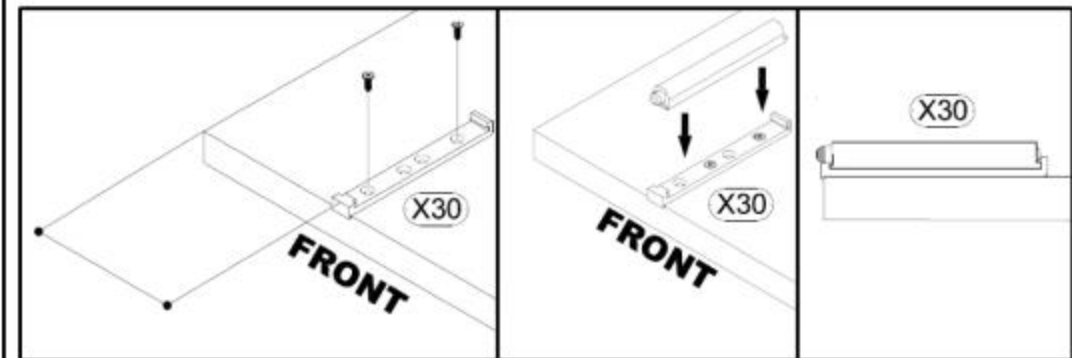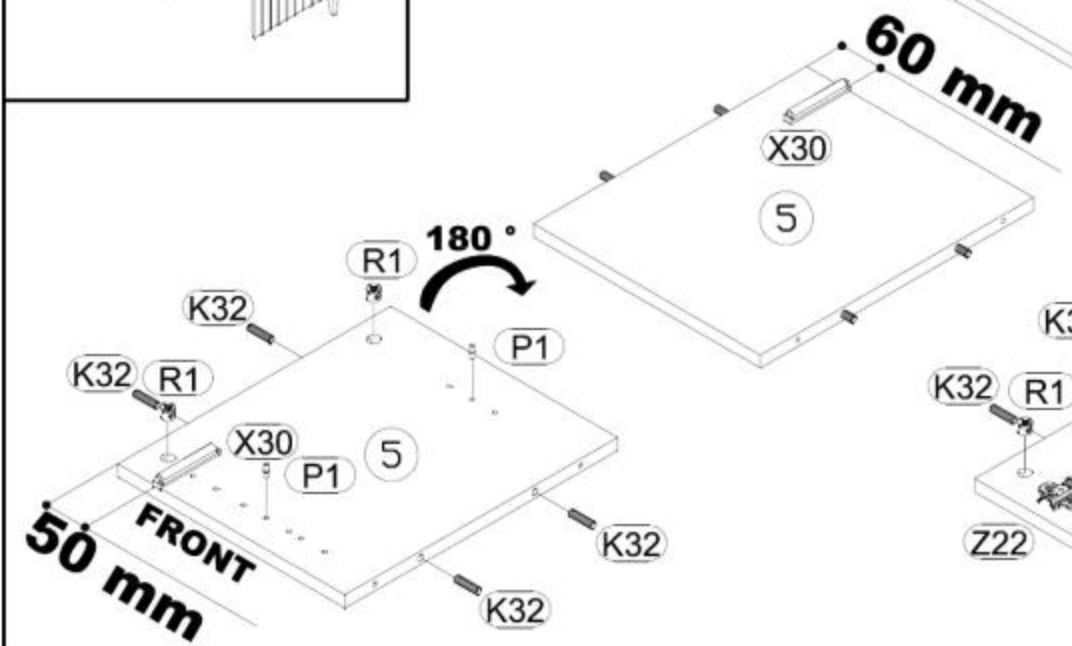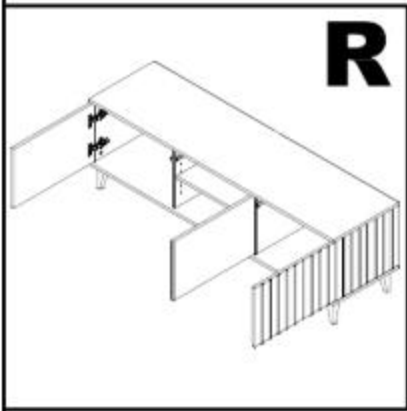





RTV 150

     3

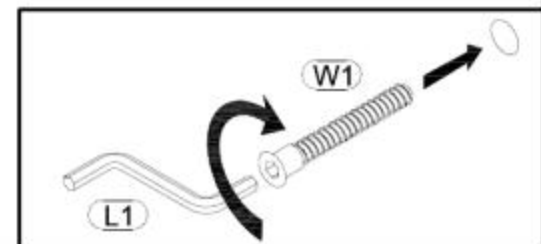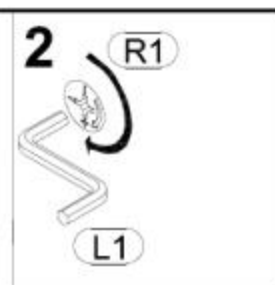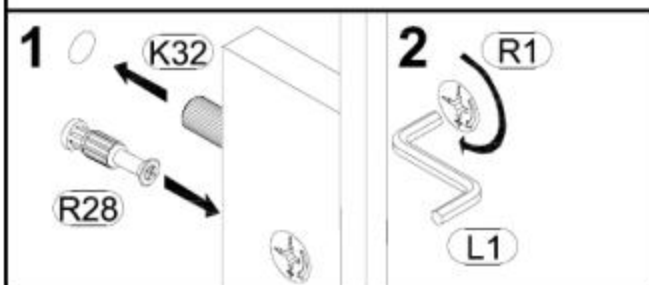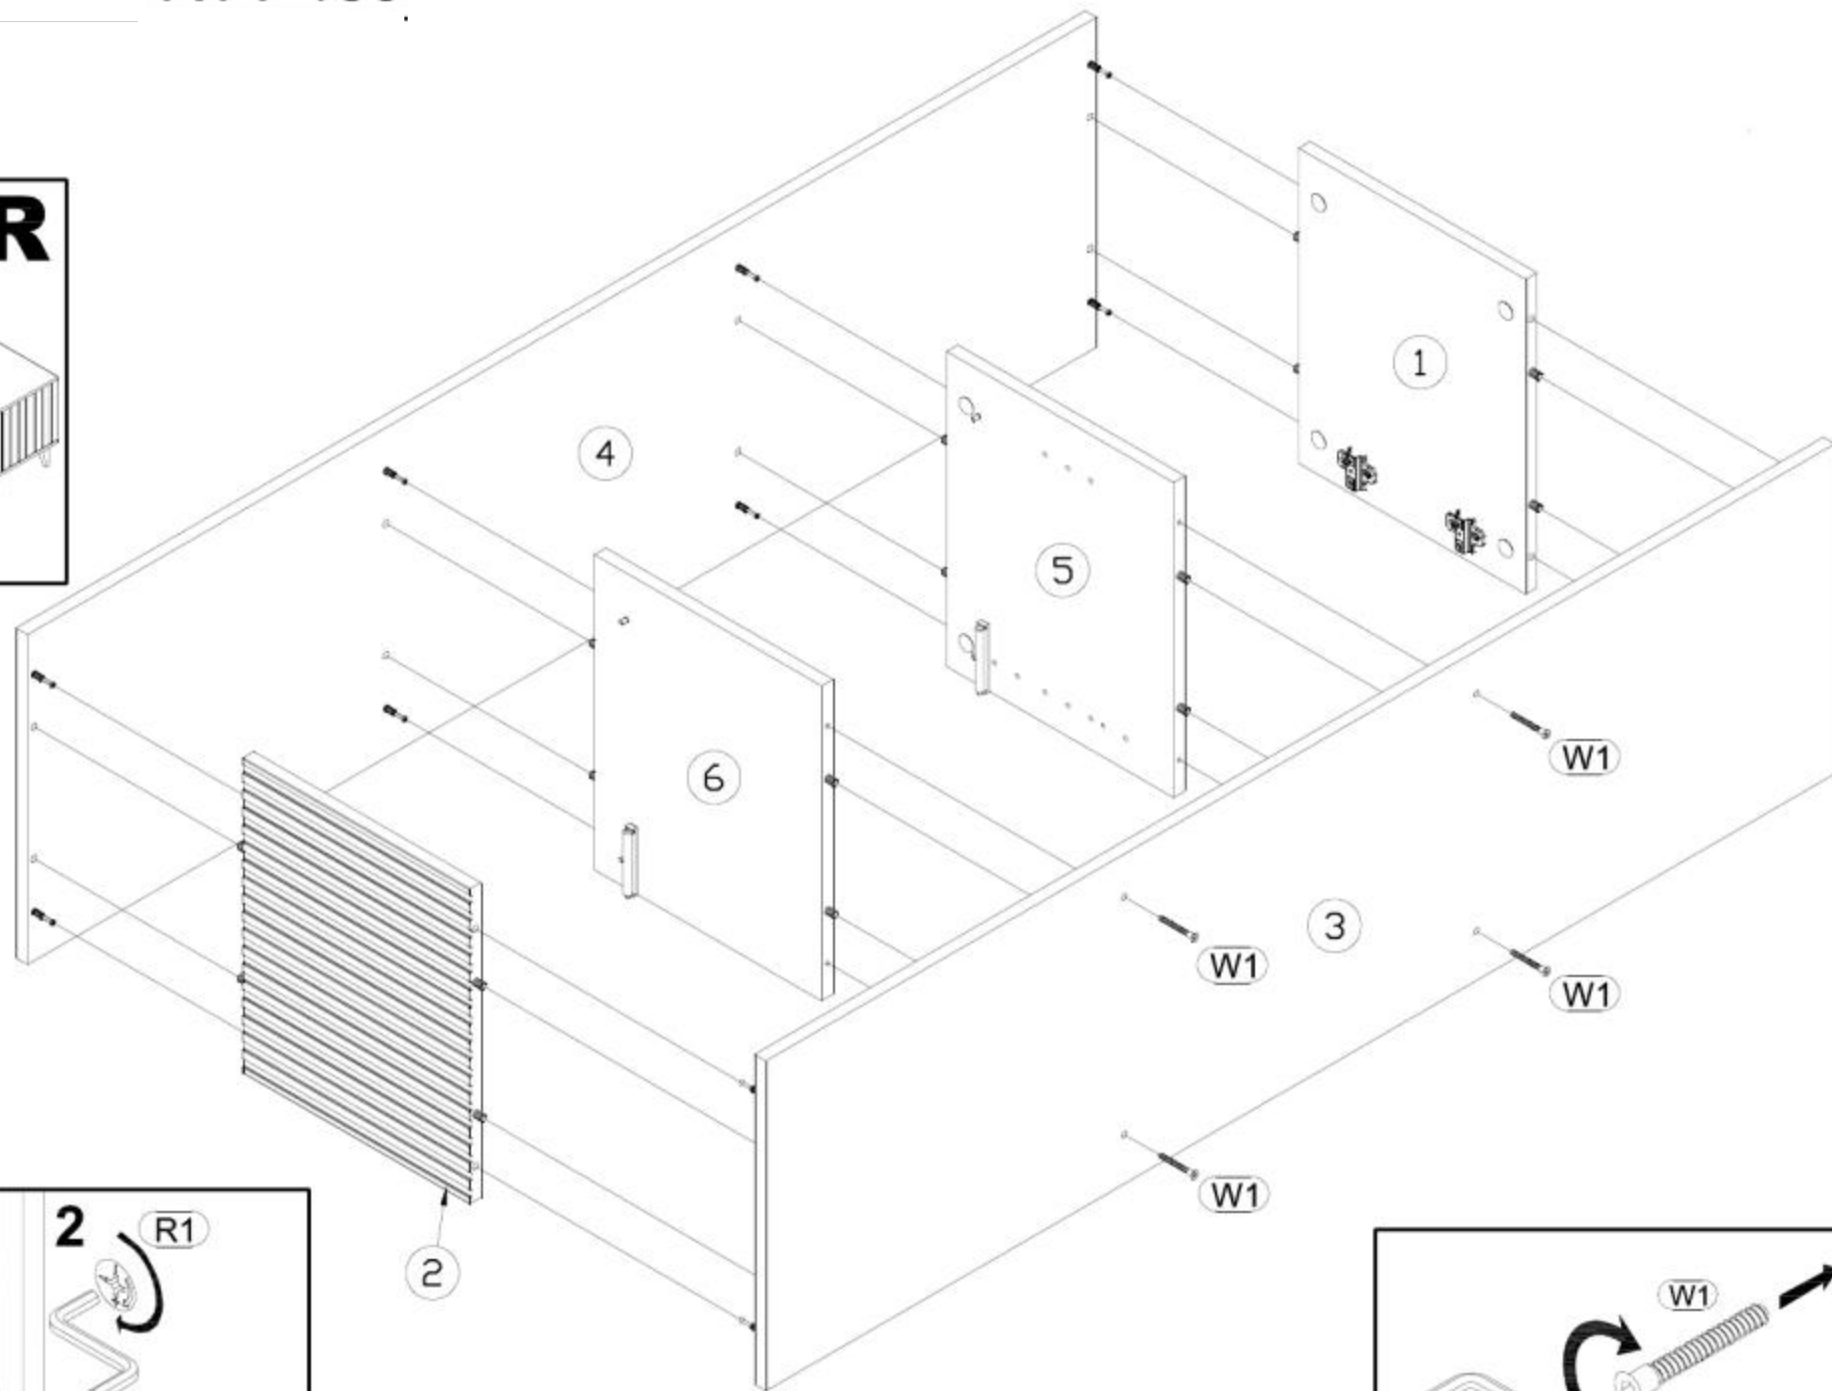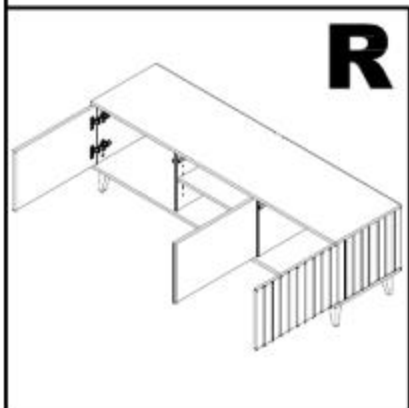






RTV 150

    4

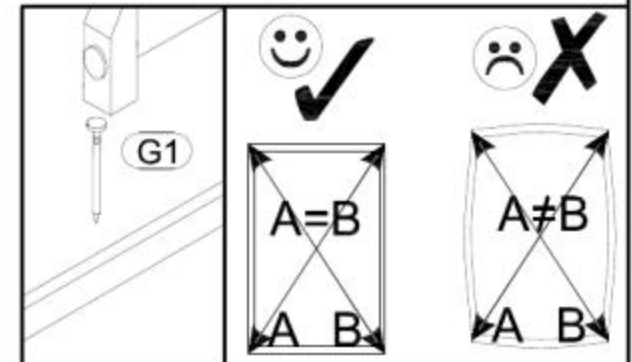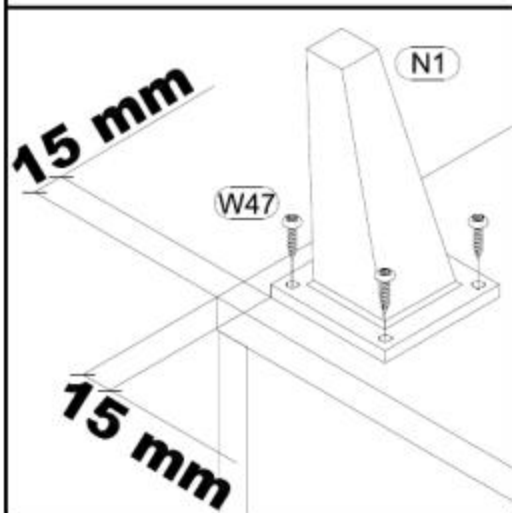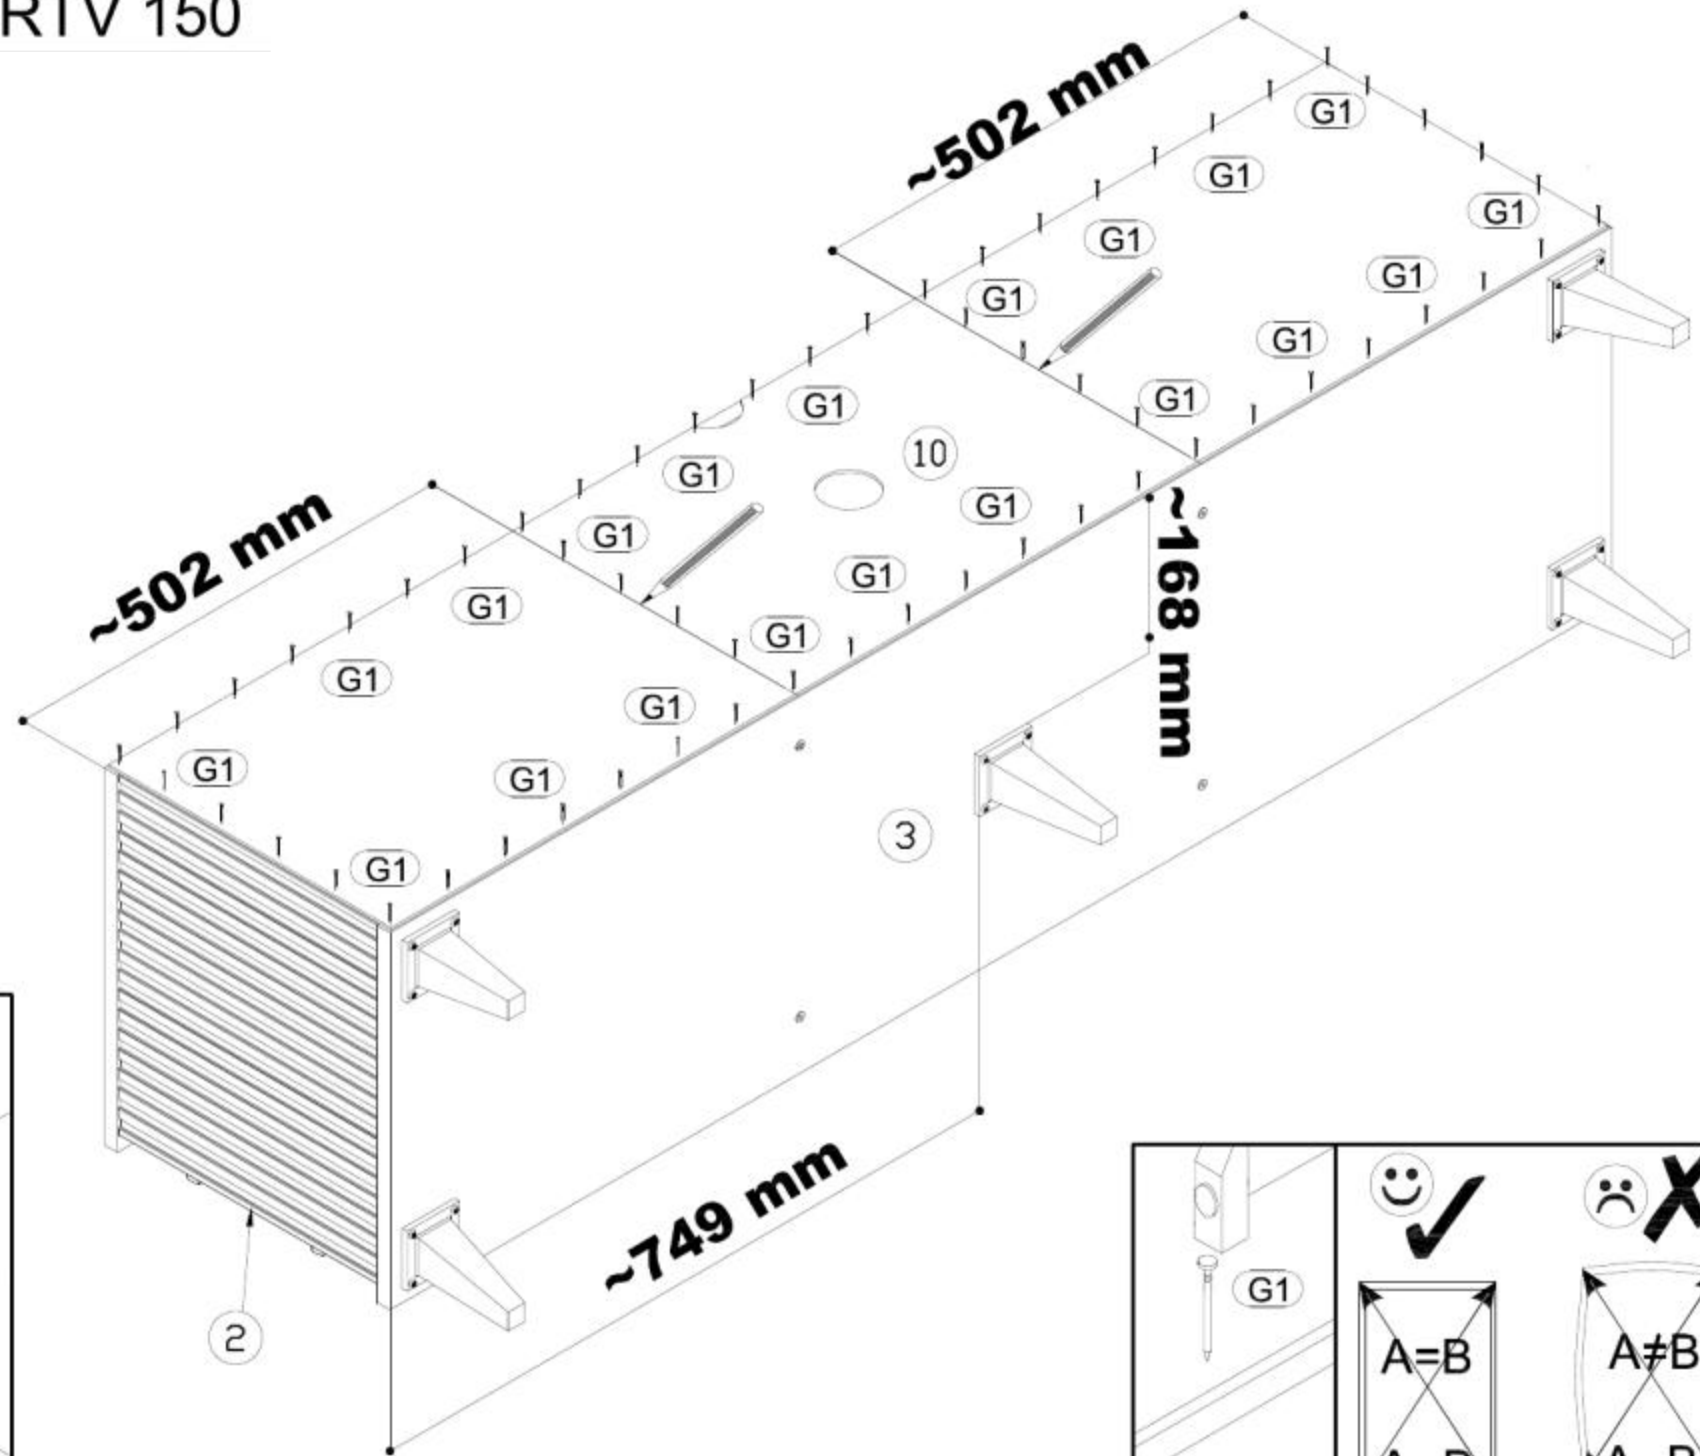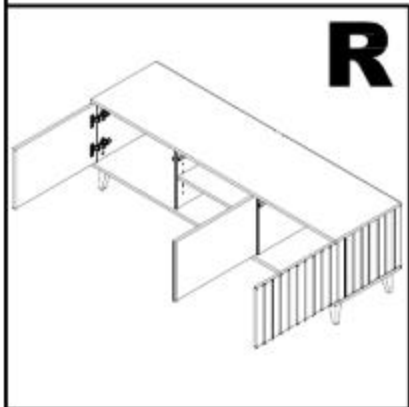










RTV 150

     5

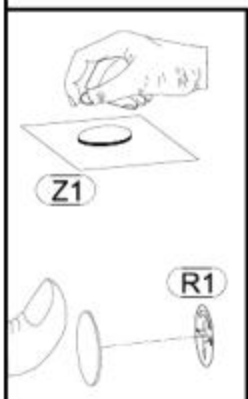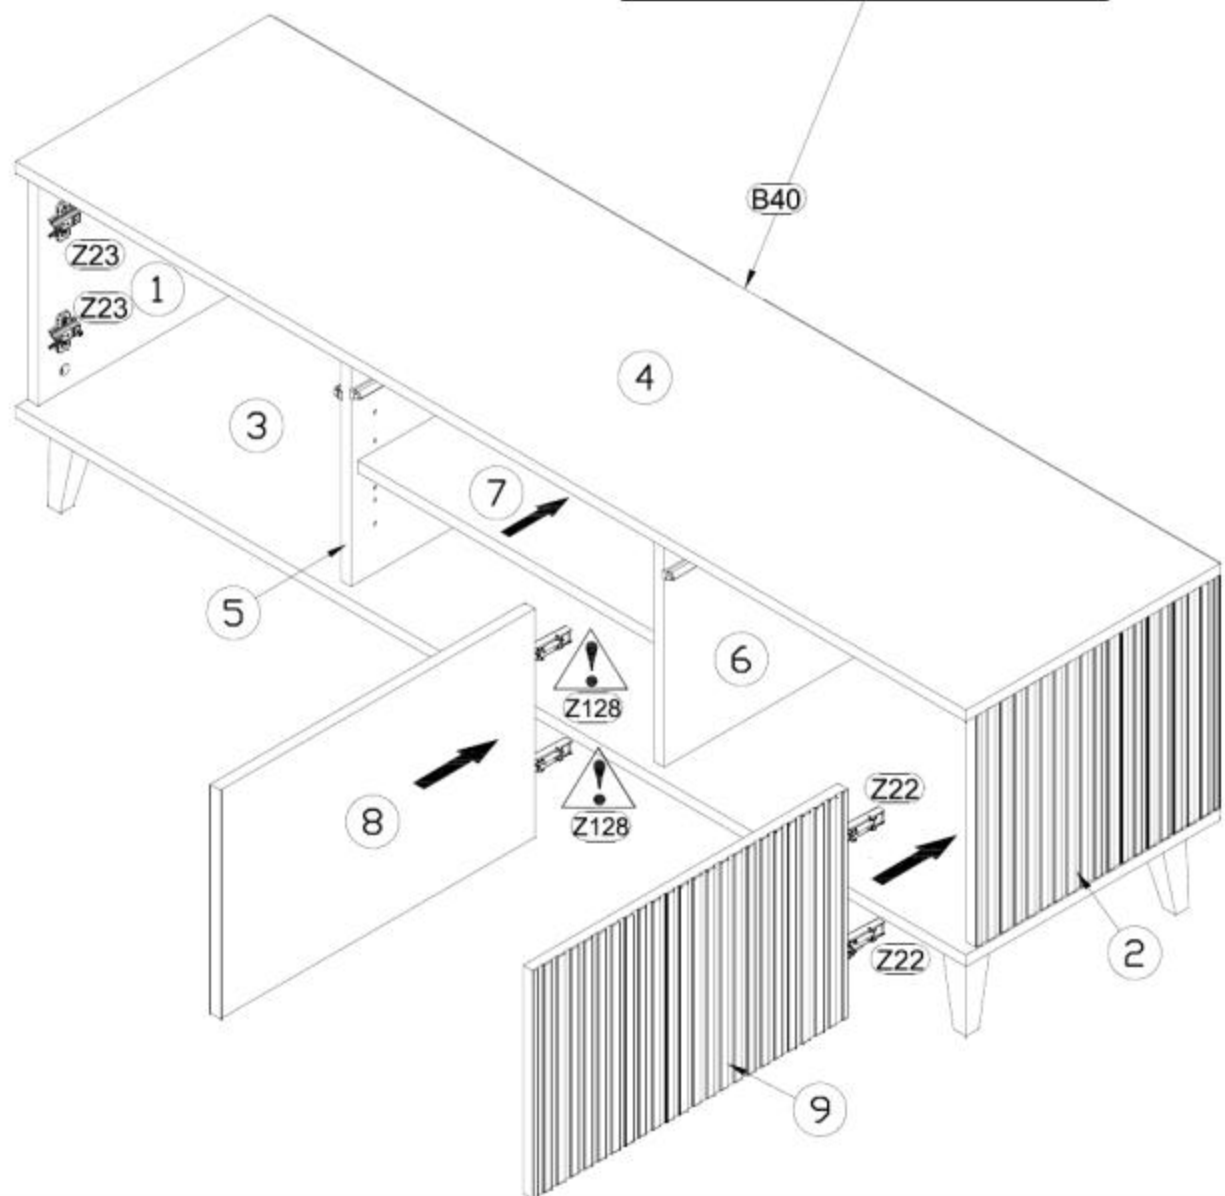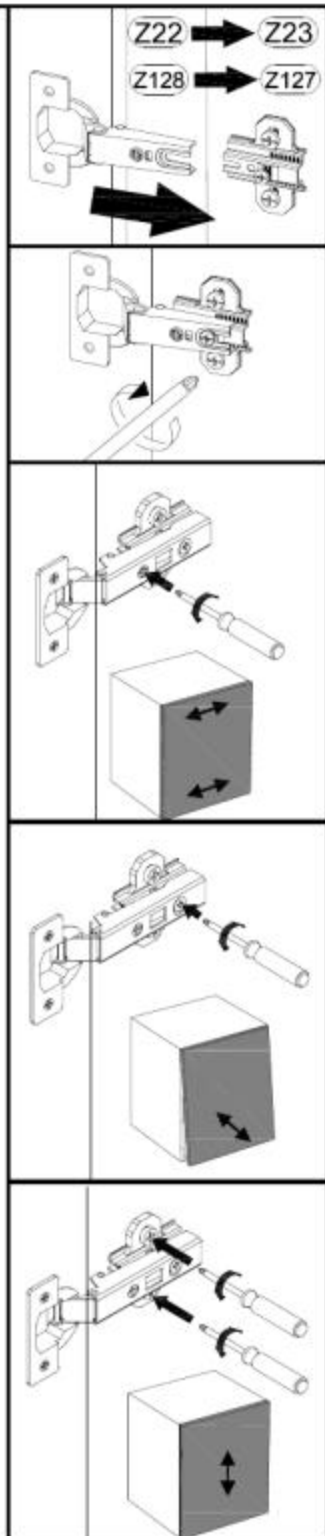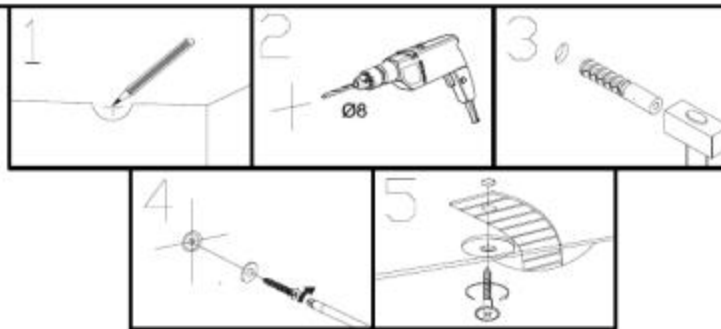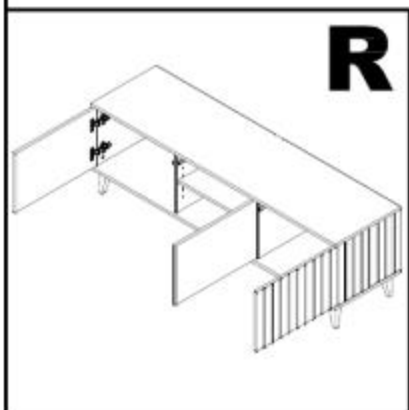






RTV 150

         6

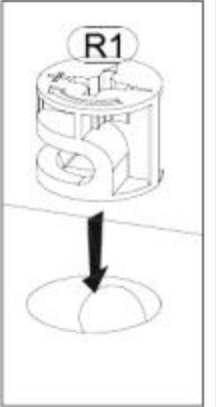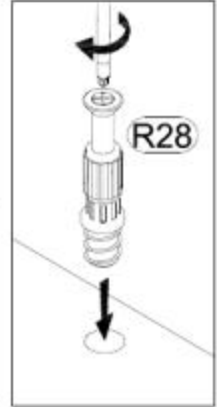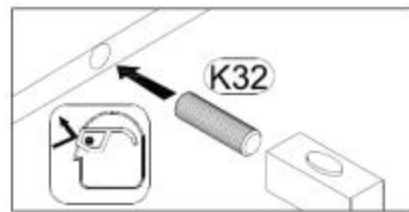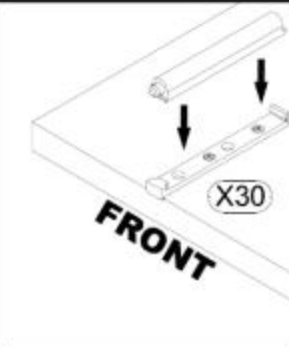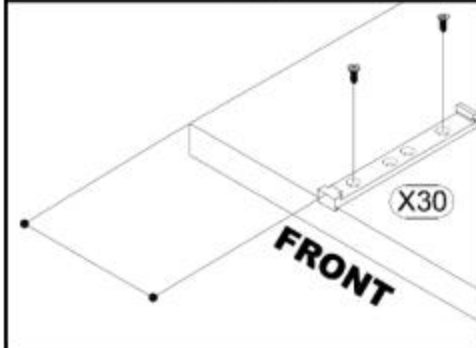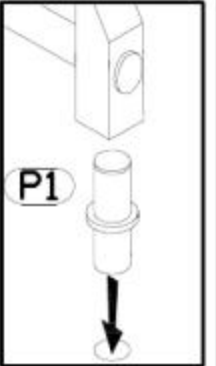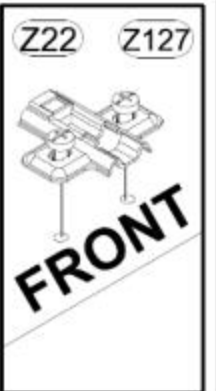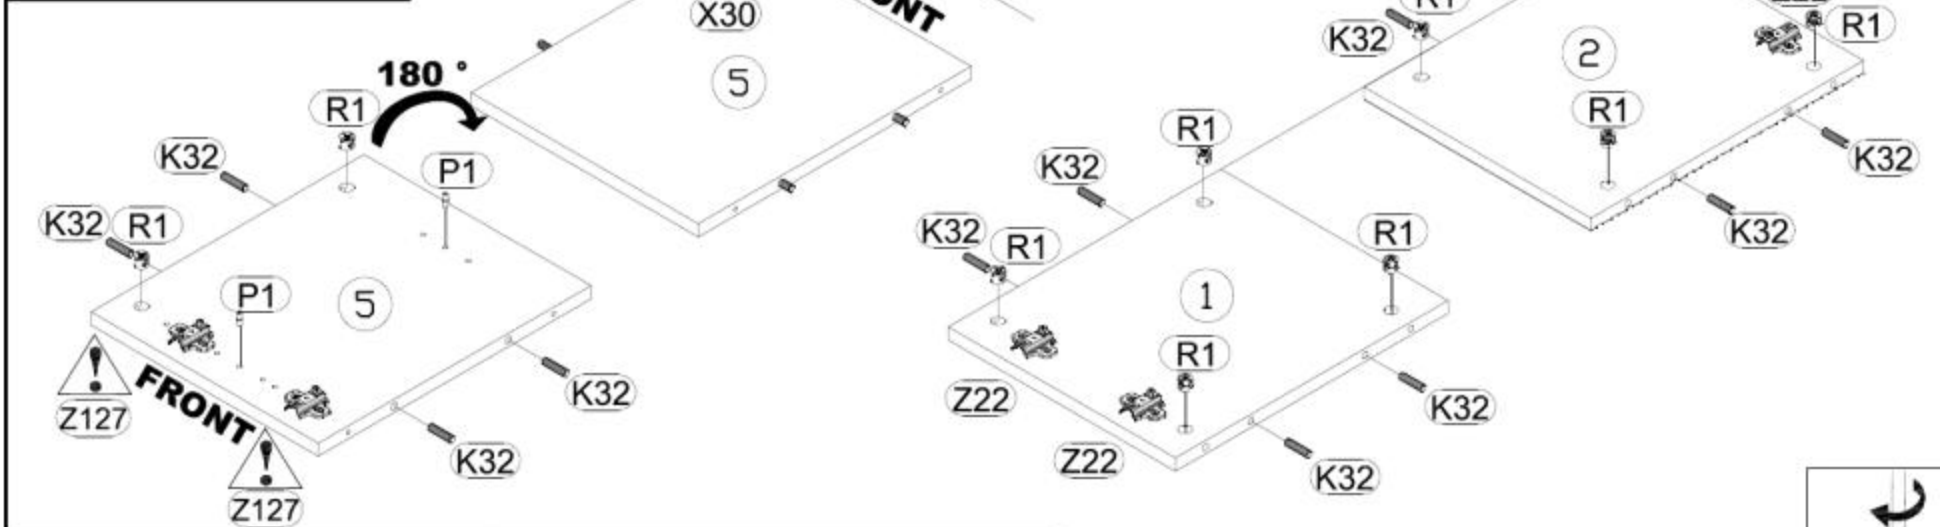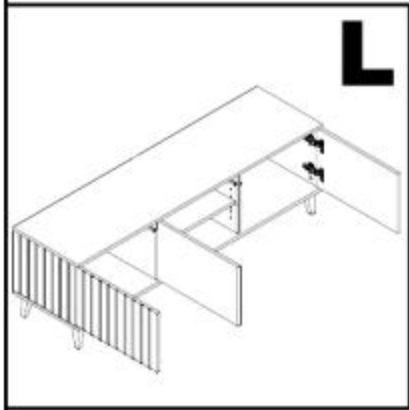





RTV 180

     7

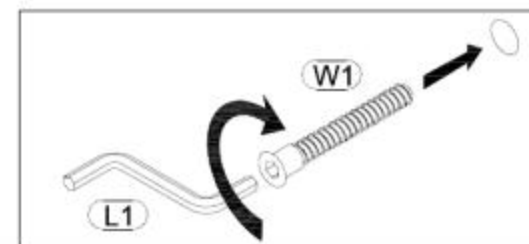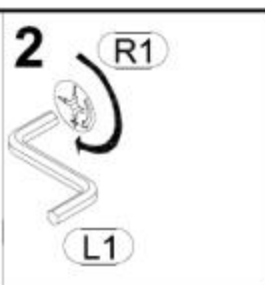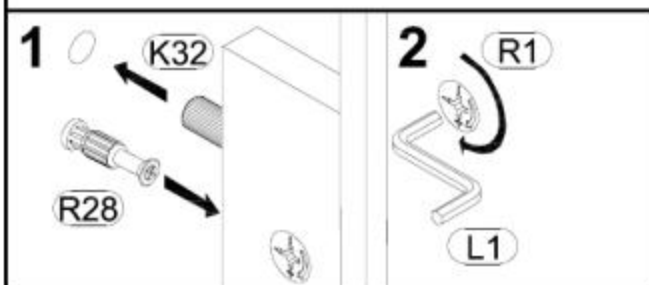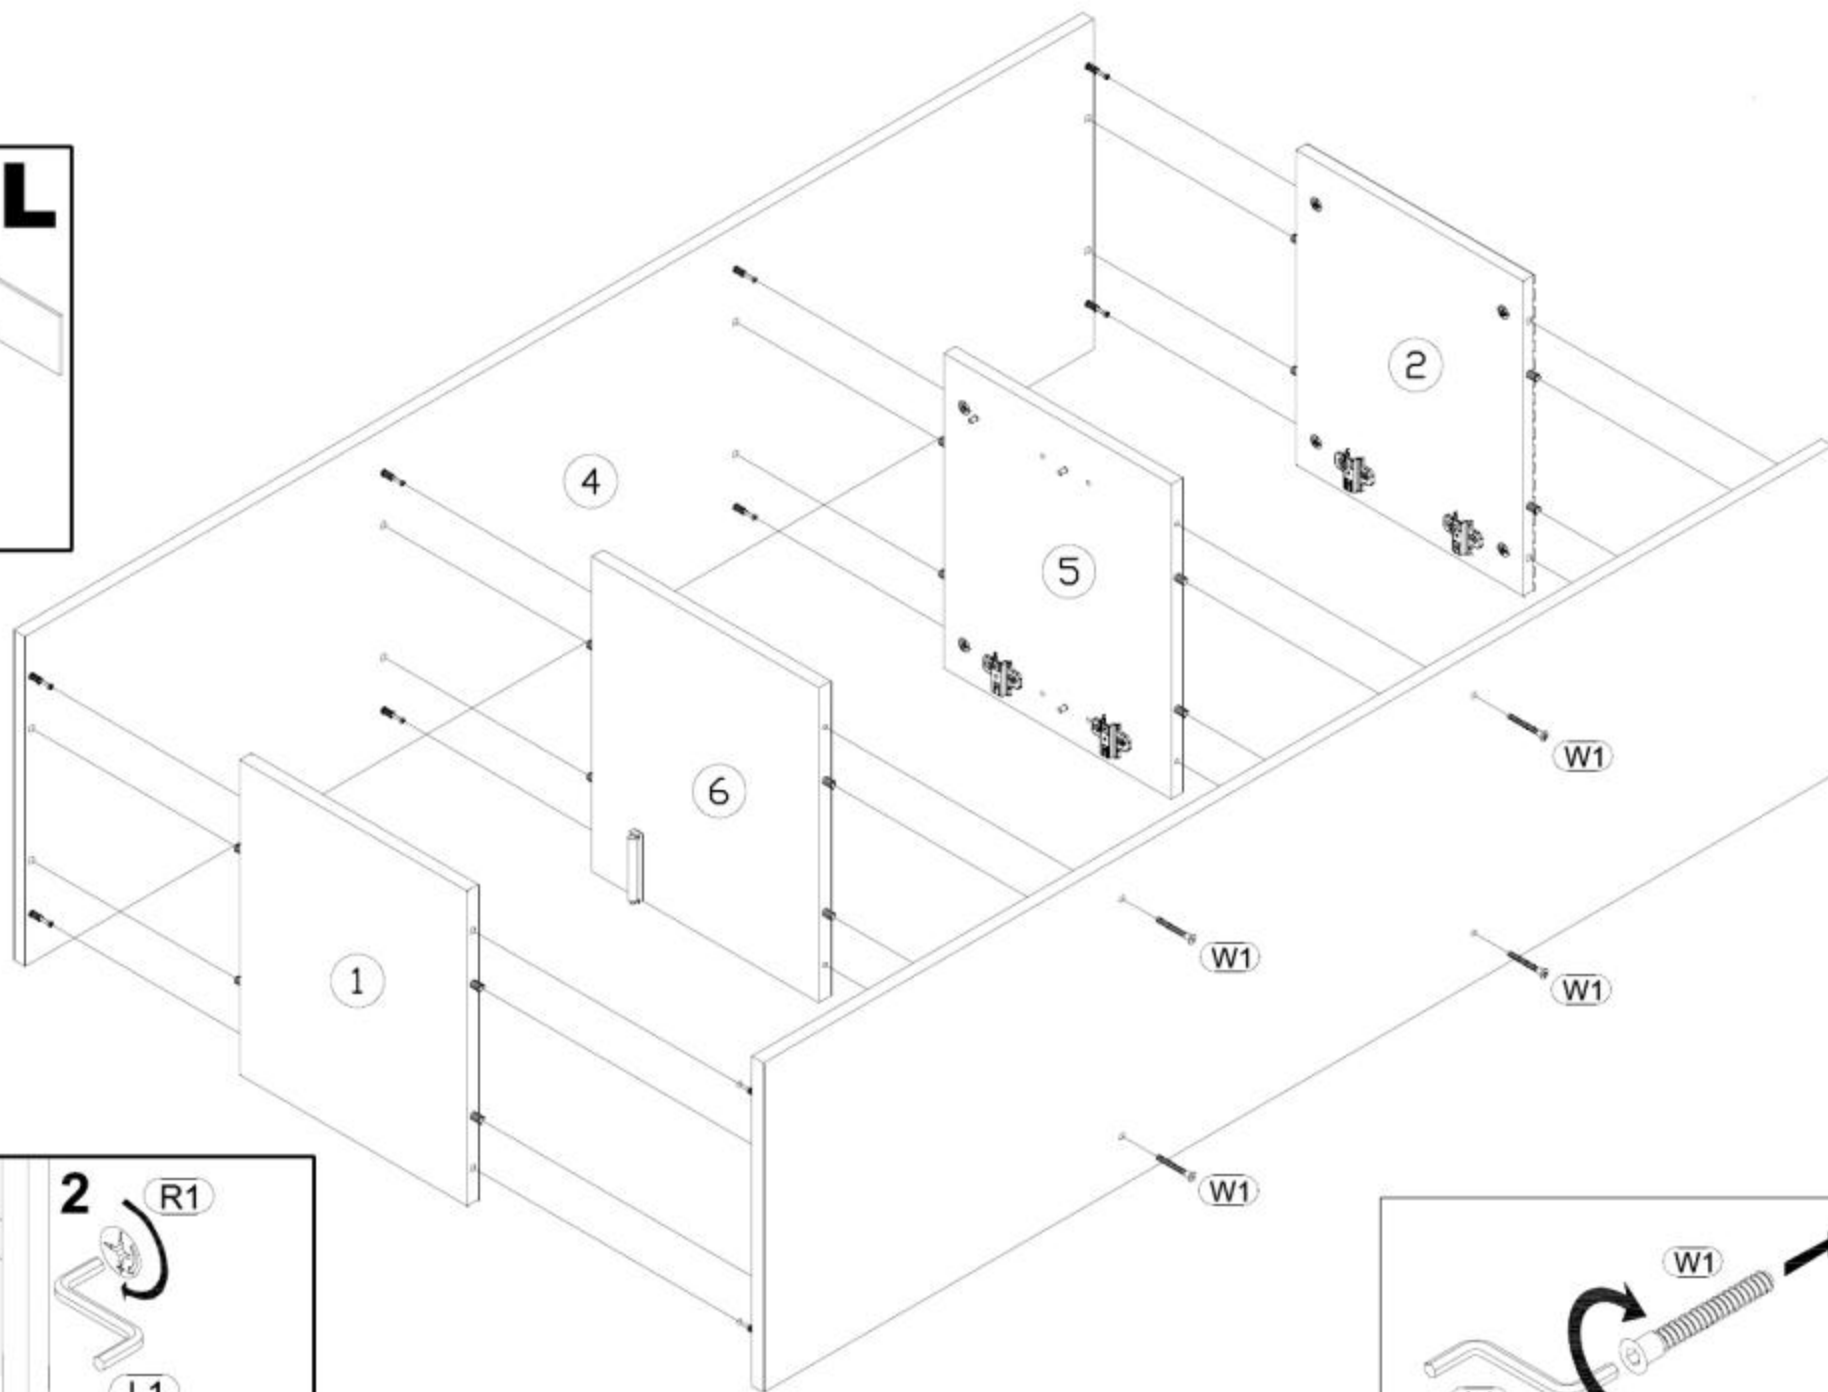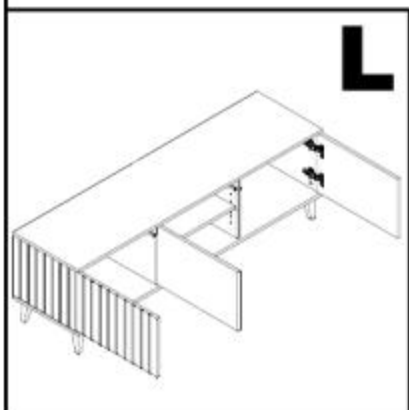

RTV 150

    8

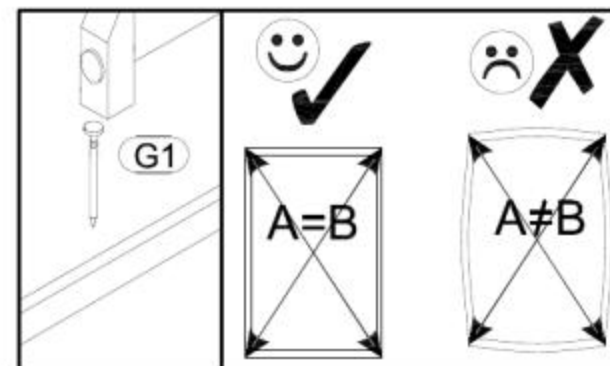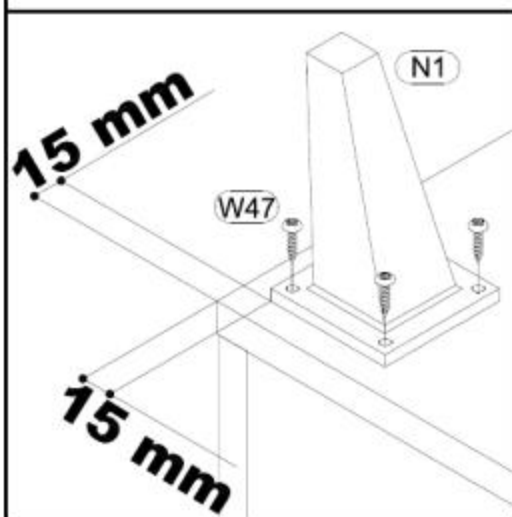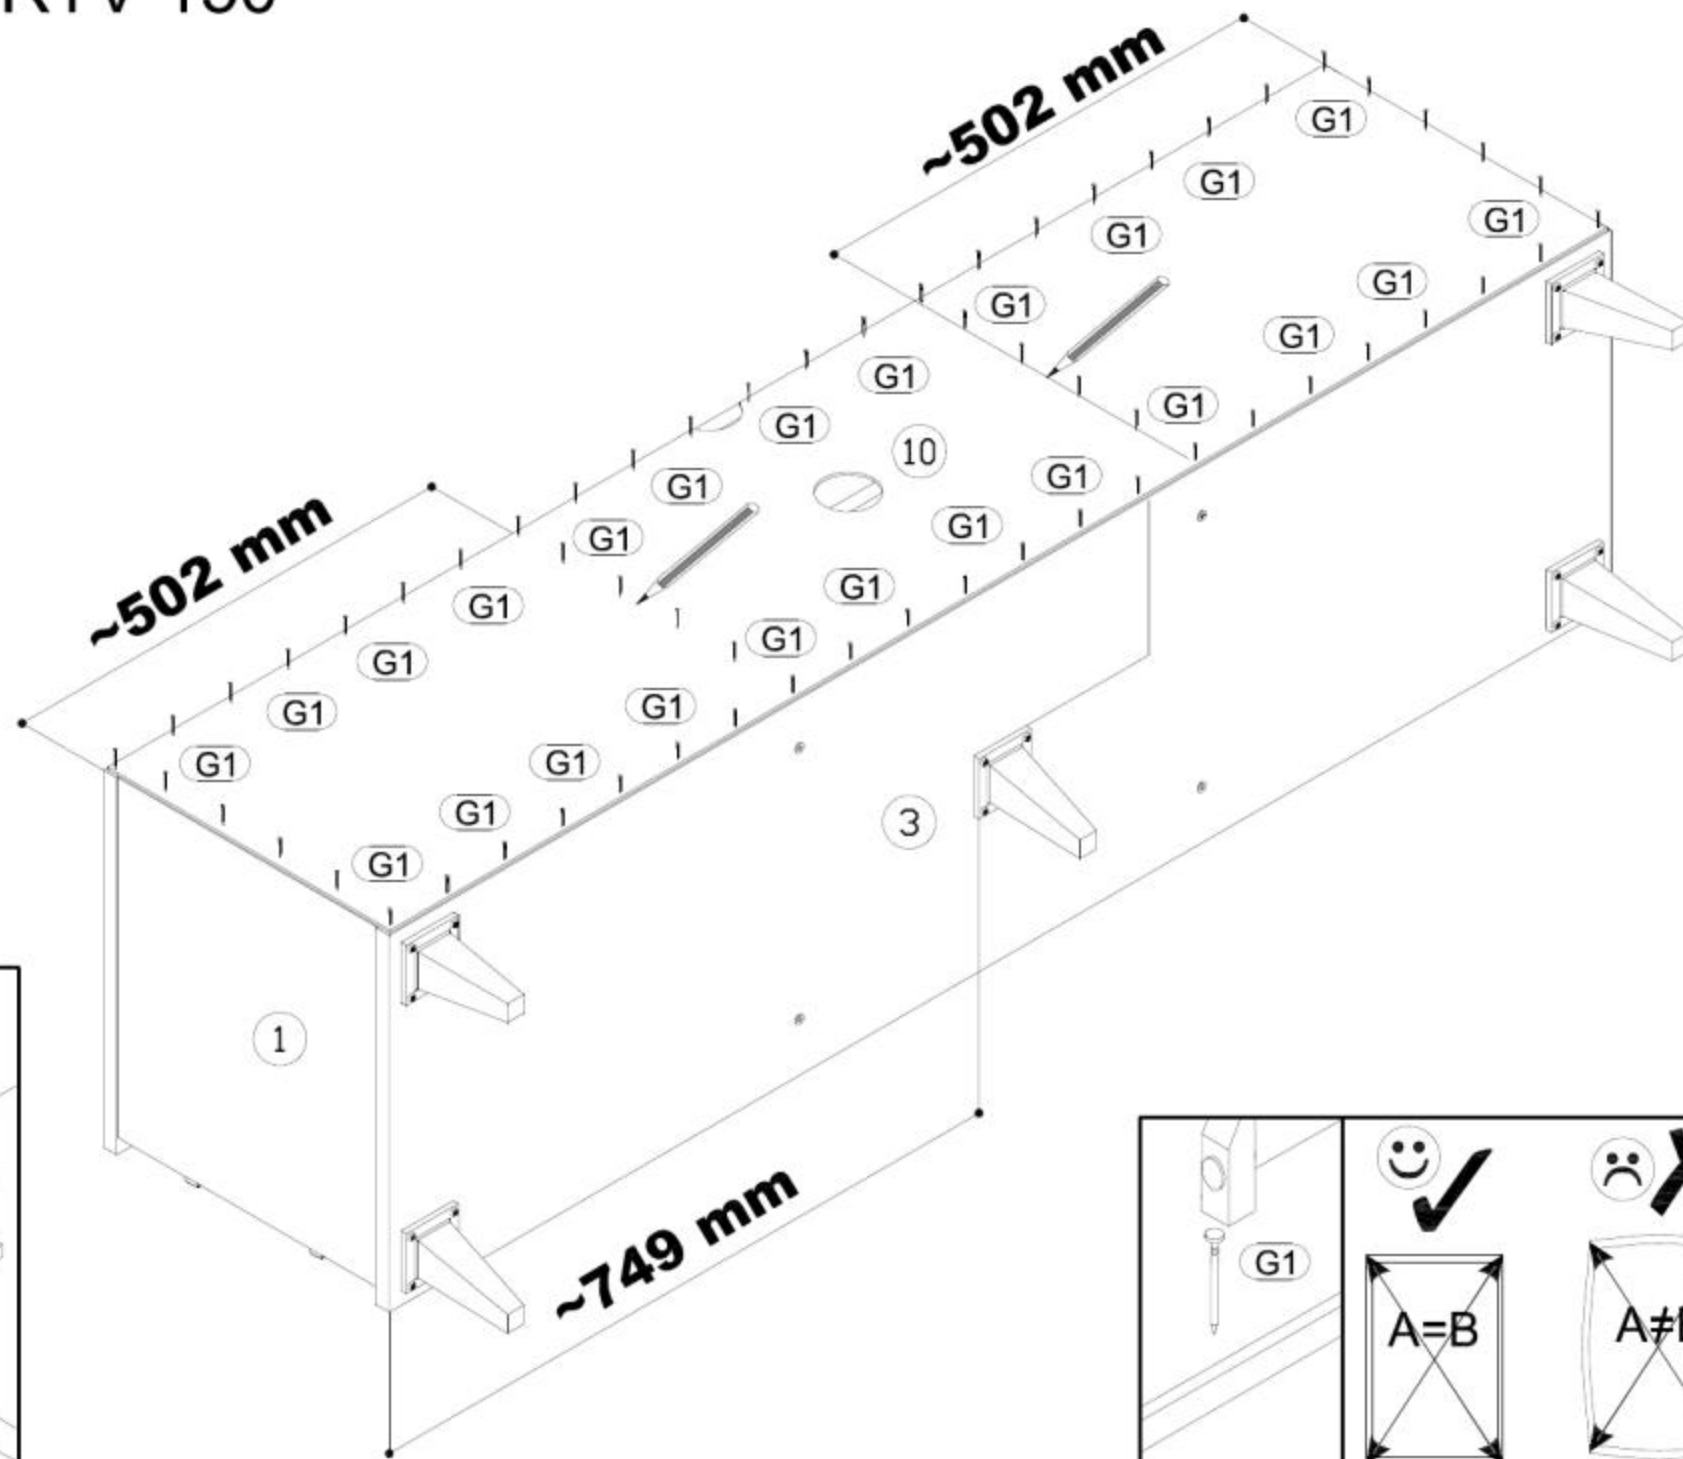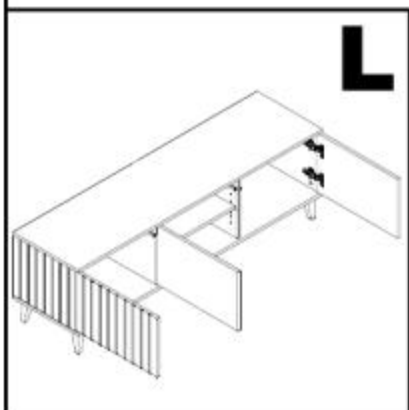

RTV 150

9

